

Universal turbo brush

User's manual

EN



SENCOR®

SVX 110TB

Before first use, please read all instructions contained in this user manual carefully, even if you are already familiar with the use of similar products. Only use this product in accordance with the instructions described in the user manual. Store the user's manual in a safe place where it can be easily retrieved in case of future need.

Save the original packaging, material, warranty card and proof of purchase receipt, at least for the duration of the warranty. If you need to ship this product, pack it in the original cardboard box to ensure maximum protection during shipping or transport (e.g., when moving or when you need to send this product for repair).

Universal turbo brush

SVX 110TB

CONTENTS

IMPORTANT SAFETY NOTICE	3
INTRODUCTION	4
PRODUCT DESCRIPTION	4
PRODUCT ASSEMBLY	4
CLEANING AND MAINTENANCE	5
TECHNICAL SPECIFICATIONS	5
INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS	6

IMPORTANT SAFETY NOTICE

- 1) Carefully unpack the product and take care not to throw away any part of the packaging before you find all the parts of the product.
- 2) This appliance must not be used by persons (including children) with physical or mental impairments or by inexperienced persons, unless properly trained or schooled in the safe use of the appliance, or unless they have been properly supervised by a qualified person who will be responsible for their safety.
- 3) Under no circumstances should you repair or alter the product yourself. Entrust all repairs and adjustments to a specialised company/service. Failure to do so will void the warranty.
- 4) Do not expose the product to extreme heat, direct sunlight or excessive humidity.
- 5) Do not place the product near heaters, open fires or other appliances or equipment that are sources of heat.
- 6) This product is designed for household use. Do not use in industrial surroundings or outdoors!
- 7) Do not use the product for other purposes than those intended.
- 8) Do not spray the product with water or any other liquid. Do not pour water or any other liquids into the product. Do not submerge the product in water or any other liquid.
- 9) Use extra care if the product is used near children. Always keep the product out of the reach of children. Children must be supervised to ensure that they do not play with the appliance.
- 10) Vacuuming objects mentioned below may damage your appliance or cause injuries to operating person:
 - wet floors, water or other liquids,
 - any type of sharp objects such as broken glass or ceramics, needles, pins, etc.
 - burning cigarettes, or smouldering pieces, matches or any other flammable or volatile liquids (e.g. gasoline, paint thinners, etc.)
 - flour, cement, plaster (i.e. dust from holes drilled in walls)
- 11) Do not vacuum large pieces of paper or plastic bags. They may easily clog the pipe or hose. If the product becomes blocked, turn it off by disconnecting the power cord from the socket and clean the pipe or hose.
- 12) Do not place the turbo brush on eyes or ears.
- 13) Never attempt to insert fingers or other foreign items into the turbo brush while the vacuum cleaner is in operation!
- 14) Vacuuming of some types of floors or floor tiles can create a static electricity charge, which is not dangerous for the user.
- 15) The manufacturer is not responsible for damages caused by incorrect use of this appliance or its accessories. Such damages include food spoilage, injuries, burns, scalding, fire, etc.

Universal turbo brush

SVX 110TB

INTRODUCTION

This turbo brush is universal and may be used with hose dimensions of any household vacuum cleaner.

The turbo brush increases the vacuuming efficiency and makes the cleaning of carpets and floor coverings more effective. The air powered rotating brush beats the carpet to loosen and remove deeply embedded dirt and to rejuvenate your carpet. Using the turbo brush it is possible to vacuum dirt, which would otherwise be impossible to remove through standard vacuuming or would be very demanding.

The rotating brush very effectively removes:

- dirt from footprints
- hair
- animal hair
- threads

PRODUCT DESCRIPTION



- ① Tightening screw
- ② Plastic hinge
- ③ Hinged cover
- ④ Front wheel
- ⑤ Rear wheel
- ⑥ Cover
- ⑦ Rotor cover lock
- ⑧ Rotating brush
- ⑨ Hinged cover lock

PRODUCT ASSEMBLY

Place the universal turbo brush in the usual manner on the vacuum hose and firmly tighten using the tightening screw ①. The turbo brush is now ready for use.

CLEANING AND MAINTENANCE



Caution

Before cleaning always remove the turbo brush from the vacuum cleaner hose.

To prevent clogging of the turbo brush (with hair, threads, animal hair, etc) it is necessary to regularly clean it and so prevent a decrease in its efficiency. If it is heavily clogged then the vacuum cleaner motor may be damaged by overheating!

The vacuum head must be regularly cleaned in two points.

Turbo brush space:

Using both hands open the turbo brush cover ③ in its lower section by shifting the locks ⑨ in the direction of the arrows (see picture) and thoroughly clean the inside area of the vacuum head and remove the dirt from the rotating brush ⑧.



Rotor space:

Simultaneously shift both locks ⑦ of rotor cover ⑥ upwards in the lower part of the turbo brush and open the rotor space and clean thoroughly.



Caution

If it is necessary to use scissors to clean the rotating brush, be very careful not to damage the brush bristles.

To clean the outer parts of the product, use a soft cloth dipped in lukewarm water. Do not use aggressive cleaning products and solvents as this could damage the surface of the product.

TECHNICAL SPECIFICATIONS

For vacuum cleaners with an input power from 1000 W
For vacuum hose diameter 25 – 38 mm

The manufacturer reserves the right to change text and technical specifications.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging materials at a designate local disposal point.